

CLEANING INSTRUCTIONS

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: Avoid creasing Blackout fabrics during cleaning.

ULTRASONIC CLEANING: Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.



WARNING

CHILD SAFETY



Inner or exposed cords can pull out to form a loop, which can STRANGLE a young child.

 
- Children can climb furniture to access inner or exposed cords. Move cribs, playpens, and other furniture away from window coverings.
- Always keep cords out of the reach of children.



CANADIAN RESIDENTS ONLY:

For more safety information call 1-866-662-0666 or go to

www.healthcanada.gc.ca/blindcords



INSTALLATION INSTRUCTIONS


HONEYCOMB SHADES

CORDLESS LIFT SYSTEM

Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shade.

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners

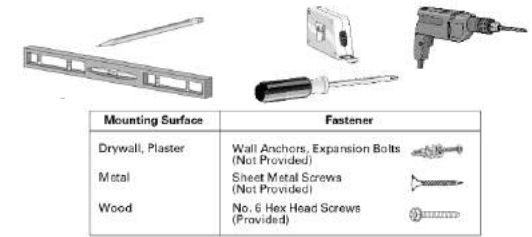


GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below.

PARTS

- Installation Brackets
- Screws
- Handle(s)

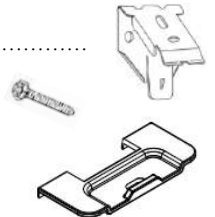

MOUNTING THE BRACKETS

The installation brackets may be used for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade. Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.

Installation Bracket Requirement Chart

Shade Width	Brackets Required
up to 38"	2
38-1/8" to 72"	3
Over 72-1/8"	4

INSIDE MOUNTS:


For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket. Refer to the mounting depth chart below.

Minimum Depth	Fully Recessed
3/4"	2-1/8"

Note: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

- Screw installation brackets through top two holes to desired window sill location.
- Ensure all brackets are level and aligned.

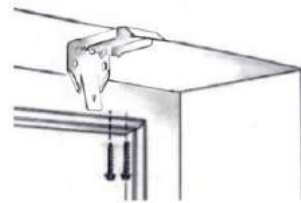


OUTSIDE MOUNTS:

For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart below.

Minimum Height
1-1/2"

ATTACH THE BRACKETS:

- Screw standard brackets through two back holes to desired location.
- Ensure all brackets are level and aligned.


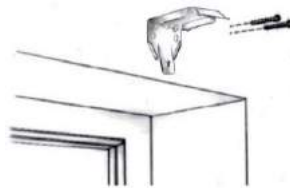


Note: Use the same holes for all brackets to ensure even projection from the surface.

INSTALLING THE SHADE

MOUNT THE HEADRAIL:

- With the front side of the shade facing you...
- Tilt the headrail slightly backward to angle the front inside lip to the brackets. (A)
- Push the headrail back and upward to snap in it into place (B).

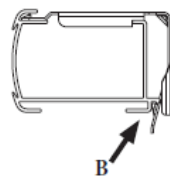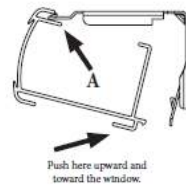


Make sure that no fabric is pinched between the brackets and the headrail.


INSTALLING THE HANDLE

Carefully determine the placement of the handles. For shades 48" wide or under the handle should be placed at the center of the rail. For shades over 48" wide, two handles should be evenly spaced on the rail, as far apart as is comfortable to operate.


Gently lift the shade fabric out of the way. Hook the handle on the underside of the bottom rail and swing up as shown, until the top of the handle snaps securely in place,

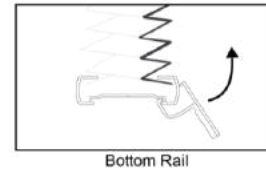

If the shade is a top down - bottom up, repeat the process for the handle on the middle rail.

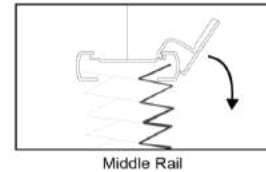

The handle will sit approximately 1/2" above the window sill when the shade is fully lowered. This allows easy access for grasping the handle when raising the shade.

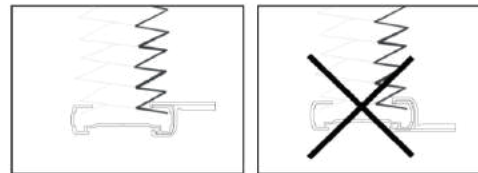

OPERATING THE SHADE

TO RAISE AND LOWER THE SHADE:

- Hold the handle in the center portion of the bottomrail to ensure level movement.
- Wider shades may have 2 handles evenly positioned within hands reach along the center portion of the bottomrail to ensure level movement.
- Lower the shade by gently pulling downward to the desired position.
- Raise the shade by gently pushing upward to the desired position.

ADJUSTING THE SHADE

- Raise and lower the shade several times.
- If the bottom or intermediate (on Top-Down/Bottom-Up) rail is not level, use the following steps to correct.

BOTTOM RAIL SHADE ADJUSTMENT:

- Holding the bottomrail with two hands, gently pull down on the side that is too high. Stop when the bottomrail is level.

INTERMEDIATE RAIL SHADE ADJUSTMENT:

- Holding the intermediate rail with two hands, gently push down on the side that is too high. Stop when the intermediate rail is level.

TROUBLESHOOTING

THE SHADE WILL NOT SNAP INTO THE INSTALLATION BRACKETS.

- Check that the installation brackets are aligned and level.

THE SHADE IS HARD TO RAISE OR LOWER, OR WILL NOT RAISE OR LOWER.

- Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement.
- Check that the installation brackets are level. Shim to level, if necessary.
- If hold-down brackets are used, make sure they have been released.
- Make sure the fabric is not caught.

THE SHADE RAISES OR LOWERS UNEVENLY OR THE BOTTOM RAIL IS UNEVEN.


- Check that the window is square by measuring the diagonals.
- Check that the installation brackets are level. Shim to level, if necessary.
- Adjust the cords under the bottom rail (see "Adjusting The Shade" above).

IMPORTANT INFORMATION REGARDING CORDLESS SHADE OPERATION.


- Daily operation of shade will ensure that it performs at its optimal level.
- If the shade is in the lowered position for an extended period of time, extra care needs to be taken when raising the shade. The fabric will relax and may resist lifting. This is a natural occurrence with all fabric shades. When lifting, you may notice the billowing (falling out) toward you. This is temporary and can be corrected by slowly raising the shade completely and then operating several times. This allows the fabric to go back to its pleated state, and the shade will operate as designed.
- If shade has been in the fully raised position for an extended period of time, it may have a tendency to "spring back" above the desired length of the shade. This is temporary and can be corrected by completely raising the shade and operating several times.
- Operating the shade with the handle(s) provided is recommended so that the shade is balanced when raising and lowering.

Important: Before starting the programming, install the shade following the installation instructions provided.

For Honeycomb Shades, connect the battery cable into the slot located in the endcap, inside the headrail, **before** hanging the shades on the brackets.

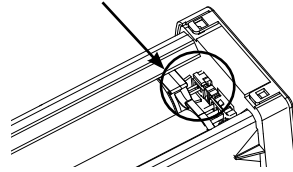


1a. Attach the Wand

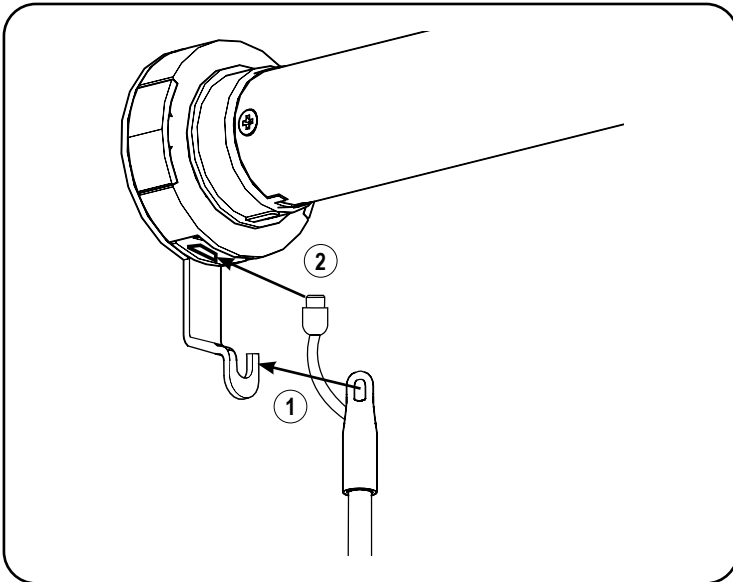


On Dual Shades, Roller Shades and Window Shadings, with the wand control buttons facing you, attached the top of the wand on the metal hook support (1) on the motor control side, then connect the cable into the motor head (2).

1b. Attach the Wand — Honeycomb Shades

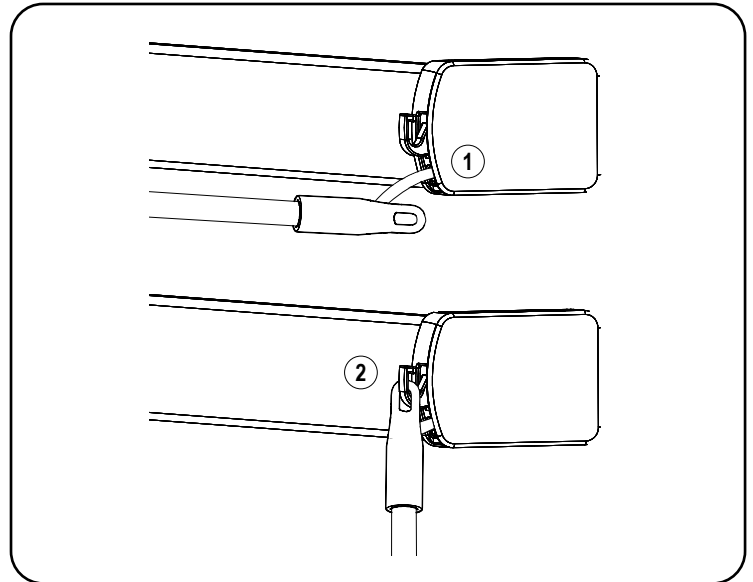

On Honeycomb shades, the wand will be already connected to the shade (1). With the wand control buttons facing you, attached the top of the wand into the plastic hook support on the motor control side (2).

2. Operate the Wand

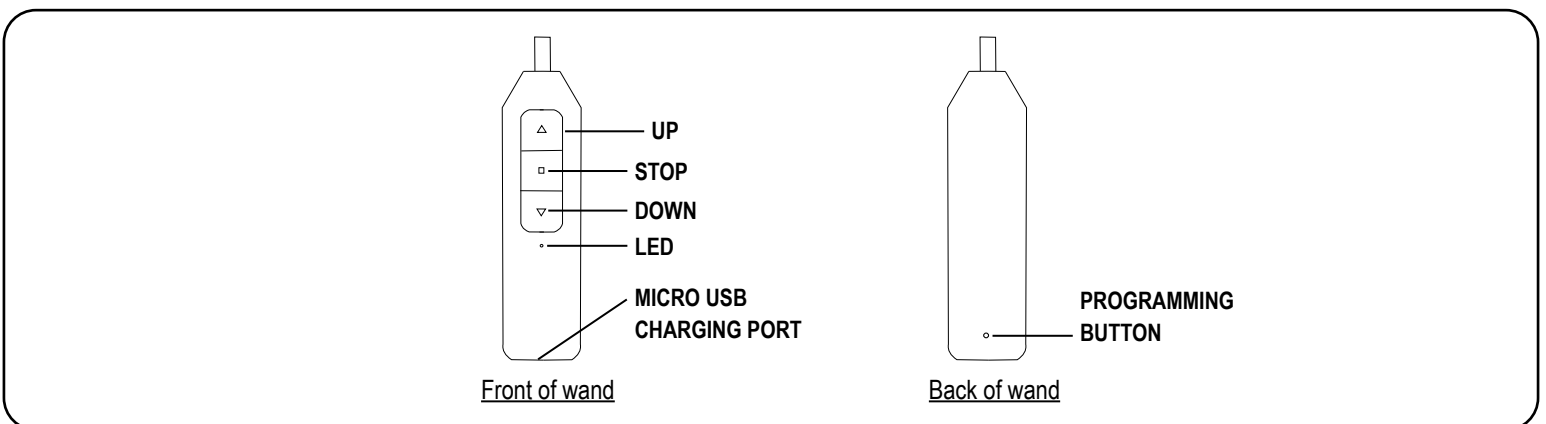

Roller and Honeycomb Mode:

- Press the **DOWN** or **UP** button to lower or raise the shade. Press the **STOP** to stop the shade at the desired position.

Window Shadings and Dual Shades Mode:

- Tapping the **UP** or **DOWN** button for less than 2 seconds will move the shade in short steps.
- Holding the **UP** or **DOWN** button down for more than 2 seconds before releasing will operate the shade at the standard speed.
- Press the **STOP** button to stop the shade at the desired position.

3. Set a Favorite Position

1 Move the shade to the desired position

2 Press and Release the PROG button

3 Jog x1

4 Press and Release the PROG button

5 Jog x1

IMPORTANT: Once the favorite position is set, the shade will always stop at the designed favorite position when passing by it.

4. Remove a Favorite Position

1 Move the shade to the favorite position

2 Press and Hold the PROG button for 7 seconds

3 Jog x2

5. Advanced Programming

IMPORTANT: Damage to shade may occur when operating the motor prior to setting limits. Attention should be given.

Switch between Roller and Window Shadings Mode

1 Press and Hold the STOP button for 5 seconds

2 Jog x1

3 Press and Release the STOP button

4 Jog x1

Adjust the Top and/or Bottom Limit

1 Move the shade to the limit that should be adjusted

2 Press and Release the PROG button

 

 

3 Jog x1

4 Adjust the shade to the desired limit position

5 Press and Release the PROG button





6 Jog x1

Factory Motor Reset









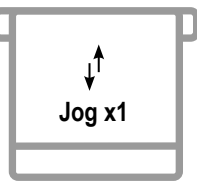

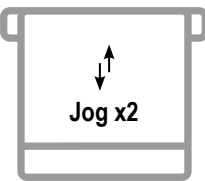
-  **Press and Hold the STOP button for 5 seconds**
-  **Jog x1**
-  **Press and Hold the PROG button for 7 seconds**
-  **Jog x2**

IMPORTANT: All limits will be erased. The motor direction will return to default and may need to be adjusted.

  
Reverse UP and DOWN Commands (Only if necessary)

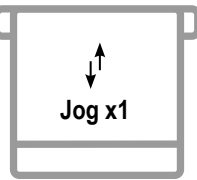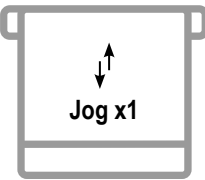-  **Press and Hold the STOP button for 5 seconds**
-  **Jog x1**
-  **Press and Release the DOWN button**
-  **Jog x1**

       Set Upper and Lower Limits (Only after Factory Motor Reset)

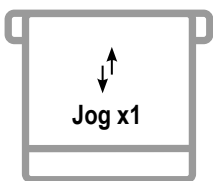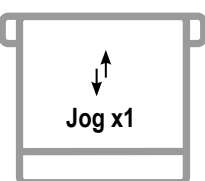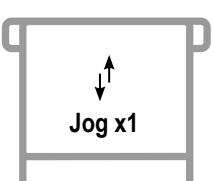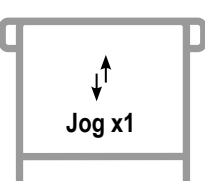-  **Press and Release the PROG button**
-  **Jog x1**
-  **Press UP to set the TOP LIMIT**
-  **Adjust the shade to the desired top limit**
-  **Press and Release the PROG button**
-  **Jog x1**
-  **Adjust the shade to the desired lower limit**
-  **Press and Release the PROG button**
-  **Jog x1**
-  **Press and Release the PROG button**
-  **Jog x1**

6. Charge the Battery

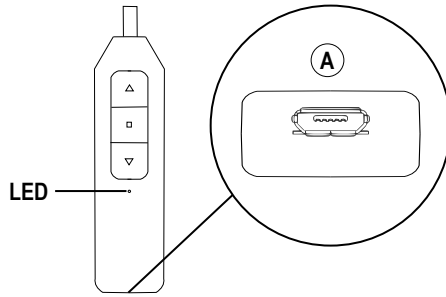

When the shade begins to operate slower than normal or only beeps when you attempt to operate, it is time to charge the battery. To Charge, connect a standard micro USB cable into the bottom of the wand (A) and into USB 5V/2A (max) power supply. A red LED on the wand indicates that the battery is charging. To fully charge the batteries, allow the batteries to charge for at least 1 hour after the LED on the wand turns green.

Note: A typical charge cycle can take between 4-6 hours.

Troubleshooting

Issues	Possible Causes	Solution
The shade is not responding	Built in battery is depleted	Recharge with compatible USB 5V/2A (max) adapter and a micro USB cable. Details under “6. Charge the Battery”
	Wand is not fully connected to the motor	Check the connection between the wand and the motor
The shade moves the opposite direction on the control buttons	The motor direction is reversed	See details under “Reverse Up and Down Commands”
The shade stops by itself before it reaches the top or bottom limit	A favorite position was set	See details under “4. Remove a Favorite Position”
The shade only moves in small steps after pressing the button	The shade is operating on Window Shadings/ Dual Shades mode	Switch to Roller/Honeycomb mode by following the steps under “Switch between Roller and Window Shadings Mode”
	The shade has no limit set	See details under “Set Upper and Lower Limits”

Child Safety



⚠ WARNING STRANGULATION HAZARD – Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible. Rev 7/21 Print 7/21

⚠ MISE EN GARDE RISQUE D'ÉTRANGLEMENT – Les enfants en bas âge peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.

NOTE: The No Tools Mounting System will come with the shade installation brackets already attached. No drilling is necessary to install this shade. A Flat head screwdriver is needed to remove the No Tools Mounting System.

1. Install the No Tools Mounting System




Make sure mounting surface is level

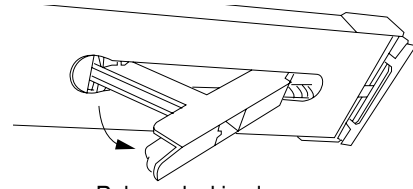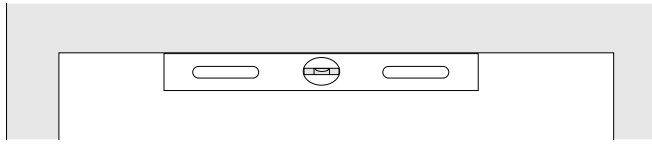

Release locking lever


1a. Install the No Tools Mounting System - Placement and Width Adjustment

IMPORTANT: If mounting on a smooth surface such as painted aluminum or tile you must apply the double sided adhesive (included) to the end caps to keep the mounting system secure. Remove release liner from one side of the adhesive and apply to both end caps and press firmly to adhere.

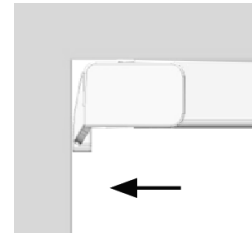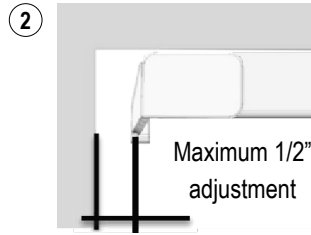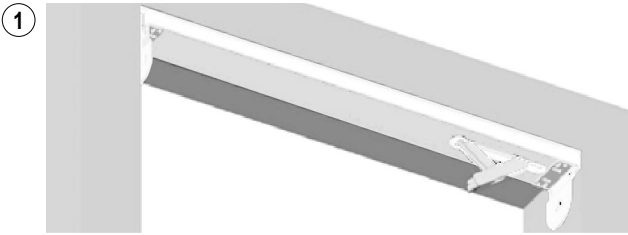

(1) Place the No Tools Mounting System in the window opening so that the end with the lever is up tight against the window casing. (2) If there is a gap at the non-lever end of the rail, simply slide the end cap until it touches the window casing. See END CAP ADJUSTMENT on page 2 if you accidentally pull the end cap out too far. If mounting on a smooth surface, remove the release liners from the double sided adhesive on the endcaps. Replace mounting system.

1b. Install the No Tools Mounting System - Lock in Place

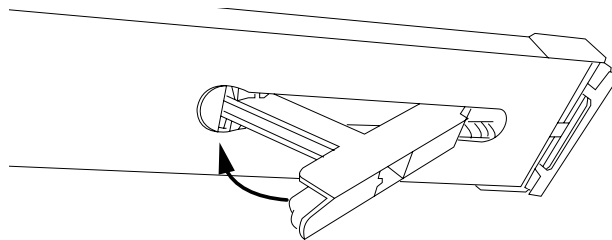

Make sure that the mounting system is level. Press up on the lever to lock the mounting system in place.


2. Install the Shade

Follow the instruction in the installation booklet that came with your shade to install the shade into the mounting brackets on the No Tools Mounting System.

3. Remove the No Tools Mounting System


IMPORTANT: First, remove the shade from the No Tools mounting system following the instructions in the installation booklet that came with your shade. Hold the mounting system securely with one hand. Use a flat head screwdriver to pry open the locking lever.

CAUTION: Lever will release abruptly. Keep hand clear of lever.

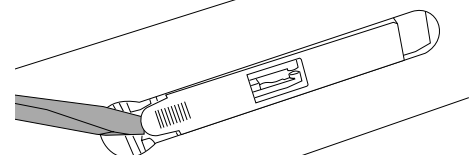

INSTALLATION INSTRUCTIONS

1. Adjusting Moveable End Cap

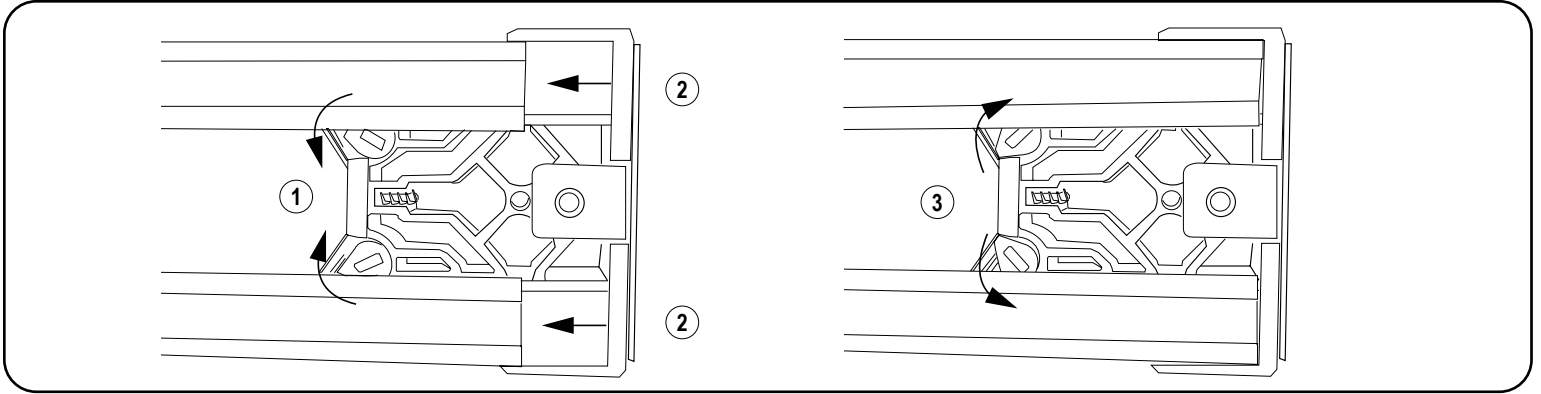

The moveable end cap is designed to only pull out with out tools. If for some reason the end cap needs to be compressed you will need a small flat head screw driver. (1) Use the screw driver to turn the locking tab release screws as shown. (2) Push the End Cap in. (3) Return the locking tabs to their original position.

Child Safety

⚠ WARNING/ADVERTENCIA	
5.1.3	Rev. 5/18 Print 5/18
	<p>Window Blind Cord Can STRANGLE Your Child. To prevent strangulation, purchase cordless products or products with inaccessible cords.</p> <p>La cuerda de la persiana puede ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.</p>