
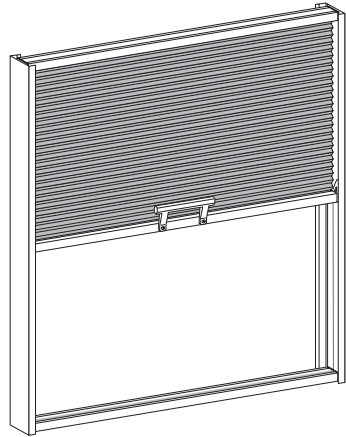


Skylight

# Cellular Shades

Installation, Operation and Care  
Instructions

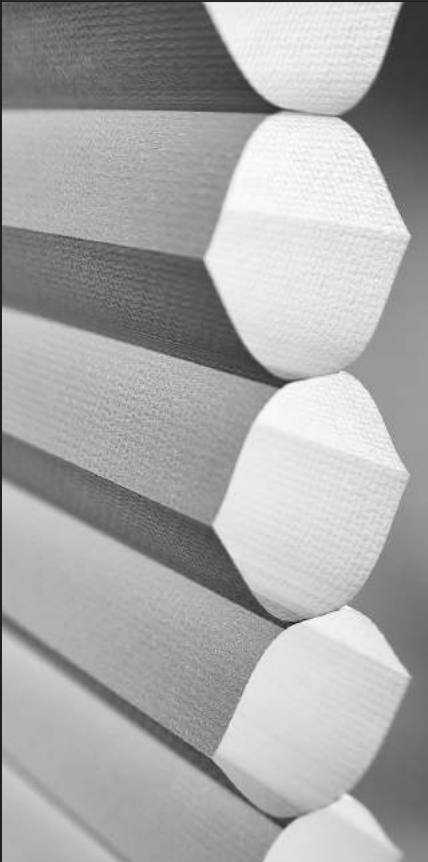

## Skylight Application

# CONTENTS

---

## Getting Started:

Product View .....	1
Tools and Fasteners Needed .....	2

## Installation:

Installation Overview .....	3
Mount the Installation Brackets — Inside Mount .....	4
Mount the Installation Brackets — Outside Mount .....	5
Install the Shade .....	7
Mount the Side Tracks .....	7
Install the Anchor Rail .....	8
Adjust the Shade .....	9
Install the Fabric Strip .....	10
Attach the Handle .....	10

## Operation:

Operate the Shade .....	10
Troubleshooting .....	11


## Care:

Removing the Shade (If Necessary) .....	12
Cleaning Procedures .....	13

<b>Warranty Policy</b> .....	<b>14</b>
------------------------------	-----------

---

Product View

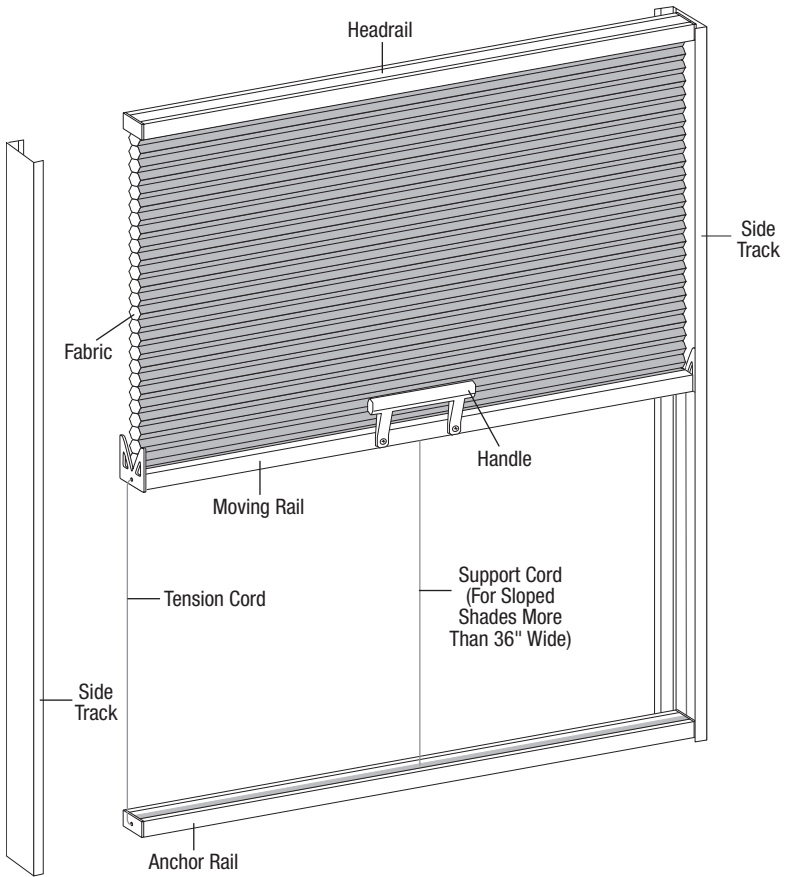

## GETTING STARTED

---

Thank you for purchasing cellular shades. With proper installation, operation, and care, your new shades will provide years of beauty and performance. Please thoroughly review this instruction booklet before beginning the installation.

### Tools and Fasteners Needed

- Flat blade and Phillips screwdriver
- Level (laser level is recommended)
- Measuring tape and pencil
- Pliers
- Power drill,  $\frac{3}{32}$ " drill bit, and  $\frac{1}{4}$ " hex driver

In addition, you will need fasteners designed to work with the specific mounting surface(s).

- **#6 Hex Head Screws (Provided).** Two  $1\frac{1}{2}$ " screws are provided per installation bracket.
- **#6 Longer Hex Head Screws (Not Provided).** If using spacer blocks, use #6 screws long enough for a secure attachment. Add  $\frac{1}{2}$ " length for each spacer block.
- **Speed Nuts and Screws (Provided).** Extension brackets come with speed nuts and screws.
- **Drywall Anchors (Not Provided).** Use drywall anchors when mounting into drywall.



#6 x  $1\frac{1}{2}$ "  
Hex Head Screw  
(Provided)



Longer #6 Hex Head Screw  
for Use with Spacer Blocks  
(Not Provided)



Speed Nut  
and Screw  
(Provided with Each  
Extension Bracket)

 
## Installation Overview

■ Your order will include the correct number of installation brackets for your shade width, as shown in the table below.


- Outside mounts require installation brackets for both the headrail and anchor rail.
- Inside mounts require installation brackets for the headrail only. The anchor rail is screwed directly to the casement.

	Shade Width	Brackets Required
<b>Inside Mount</b>	18" – 31"	2
	31 1/8" – 60"	3
<b>Outside Mount</b>	18" – 31"	4
	31 1/8" – 60"	6

3/8" Installation Bracket




3/4" Installation Bracket

 

## Mounting Types and Window Terminology

If the installation brackets are mounted correctly, the rest of the installation process follows very easily. To prepare for this important first step, review the mounting types and basic window terminology illustrated below.

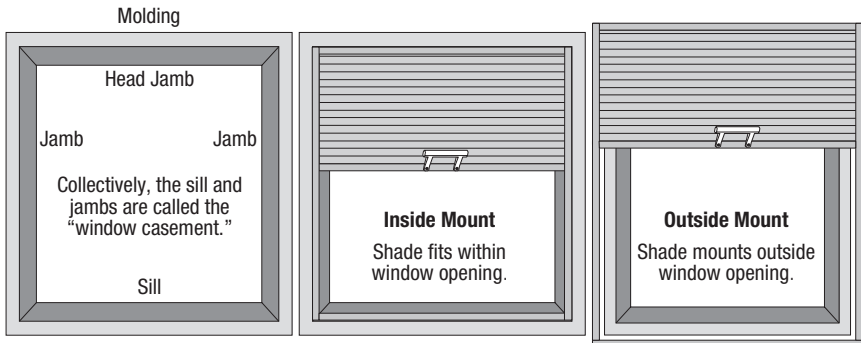


■ Refer to the appropriate page below based on your order:

- **Inside Mount — Page 4**
- **Outside Mount — Page 5**

# INSTALLATION

## Mount the Installation Brackets — Inside Mount

- Mark  $4\frac{1}{2}$ " from each jamb for the headrail.
  - If more than two brackets are required, center the third bracket.
  - If your shade has a support cord, position the third bracket 1" to the left of center.

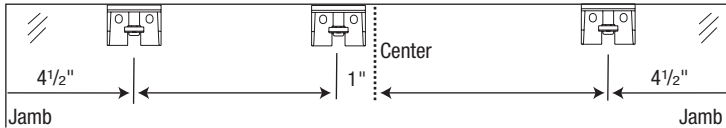

- Center the brackets on your marks and mark the location of the screw holes.
  - Mounting depth will vary depending on the fabric pleat size. Refer to the chart for depth requirements.
  - For fully recessed mounting, the entire shade is inside the window casement.

**IMPORTANT:** The front edges of the installation brackets must be level and aligned.


Bracket Type	Minimum	Fully Recessed
$\frac{3}{8}$ " Standard	1"	$1\frac{11}{16}$ "
$\frac{3}{4}$ " Standard*	$1\frac{1}{4}$ "	$2\frac{1}{2}$ "

\*Double and triple cell fabrics use  $\frac{3}{4}$ " brackets.

- Drill the screw holes using a  $\frac{3}{32}$ " drill bit.

**IMPORTANT:** Use drywall anchors when mounting into drywall.

- Attach the installation brackets using the screws provided.
  - Check that the mounting surface is level and the brackets are aligned. If mounting to a heavily textured surface, shim the brackets, if needed.

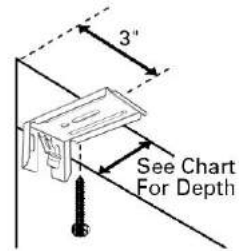


---

Proceed to "Install the Shade" on page 7.

---

## Mount the Installation Brackets — Outside Mount



- Center the headrail and the anchor rail over the window opening at the desired height. Use a pencil to lightly mark each end of the headrail and the anchor rail.
  - Alternatively, measure the width of the headrail and the anchor rail and use that width to mark the headrail and the anchor rail end points over the window opening.
- Mark 4½" from each end of the headrail and the anchor rail.
  - If more than two brackets are required, center the third bracket.
  - If your shade has a support cord, position the third bracket 1" to the left of center.

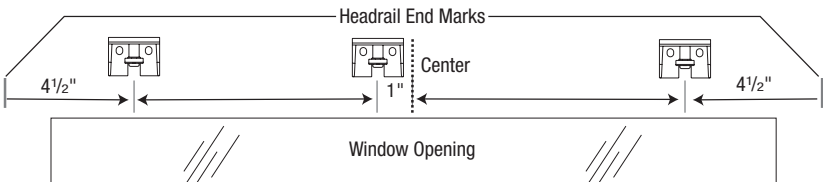

- Center the brackets on your marks, then mark each of the screw holes.
  - A minimum flat vertical surface of 5/8" for a 3/8" bracket or 1" for a 3/4" bracket is required to mount the brackets.
  - The top of the installation brackets or extension brackets should be at the desired top point of the shade.

**IMPORTANT:** The brackets must be level and aligned to each other.

**CAUTION:** The rear of the brackets must be flush against a flat mounting surface. *Do not mount brackets on curved molding.*

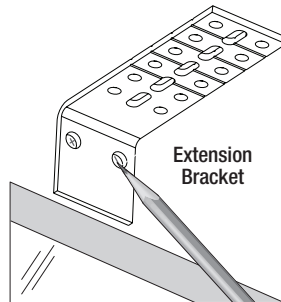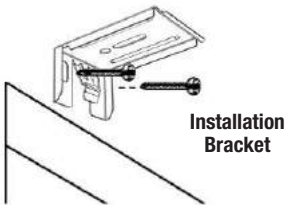

## INSTALLATION



---

- Drill the screw holes using a  $\frac{3}{32}$ " drill bit.

**IMPORTANT:** Use drywall anchors when mounting into drywall.

- Attach the installation brackets using the screws provided.


**IMPORTANT:** The front edges of the installation brackets must be level and aligned to each other.

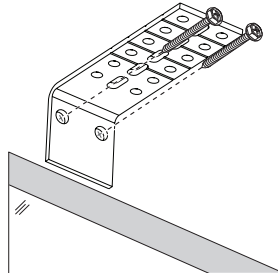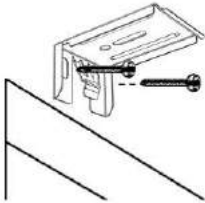


- If using spacer blocks with installation brackets, attach the spacer block(s) and installation bracket to a flat vertical mounting surface with #6 mounting screws long enough for a secure installation.

**CAUTION:** The rear spacer block must be flush against a flat mounting surface. *Do not mount spacer blocks and installation brackets on curved molding.*

- Each spacer block projects the installation bracket  $\frac{1}{2}$ " from the mounting surface.  
A maximum of  $1\frac{1}{2}$ " of spacer blocks per installation bracket is recommended.
- The solid side of the spacer blocks faces the mounting surface.

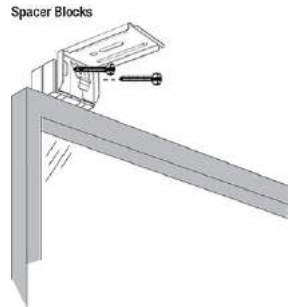

- If using extension brackets, attach an installation bracket to the underside of each extension bracket using the provided screws and speed nuts.

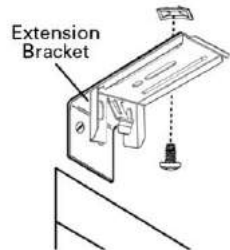

---

Proceed to "Install the Shade" on page 7.


---



## Install the Shade

### Standard Brackets

- Position the shade so that the front (colored) side of the fabric faces you.
- Slip the headrail into the installation brackets so the front of the bracket slides under the front groove on the top of the headrail.
- Gently roll the back of the headrail up and push back to snap into place.

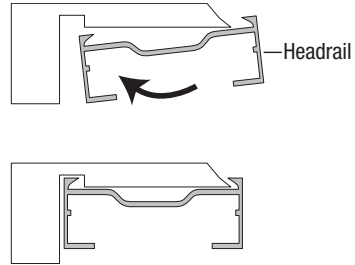


**IMPORTANT:** Do not remove the rubber bands that hold the headrail, fabric, moving rail, and anchor rail until after the side tracks are mounted.

## Mount the Side Tracks

### Inside Mount

- Attach the side tracks to the inside of the window using the pre-drilled holes on alternate sides of the track center line.
  - For sloped installations, align the wide flange with the front edge of the window opening.
  - For vertical installations, align the narrow flange flush with the edge of the opening.
- Make sure the rails are centered within the side tracks.

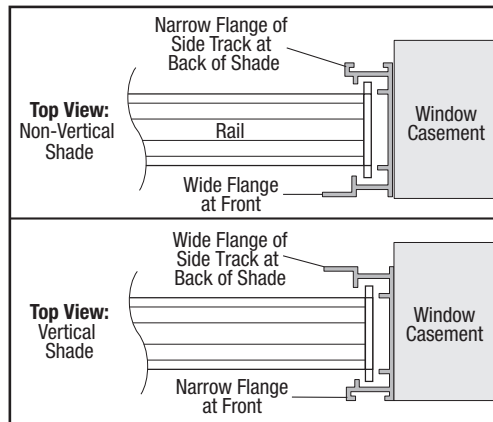


- Make sure the side tracks are parallel by measuring the distance between them at the top and bottom of the window.
- If the side tracks are more than 1/4" off of parallel, use shims under the mounting screw locations, starting at the ends of the side tracks.

# INSTALLATION

## Outside Mount

The narrow flange on the side tracks should be at the front of the shade. Holes are drilled in the groove near the edge of the wide flange.

- Attach the wide flange to the outside of the window casement using the appropriate fasteners.
- Make sure the rails are centered within the side tracks.
- Make sure the side tracks are parallel by measuring the distance between them at the top and bottom of the window.

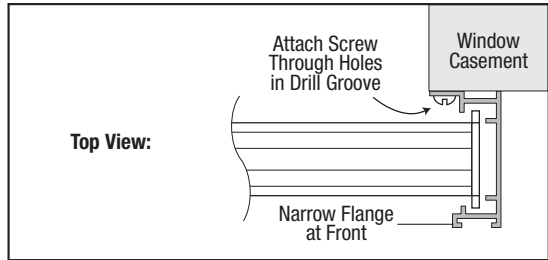




## Install the Anchor Rail

- Cut the rubber bands that are holding the rails and fabric together.
- Lower the anchor rail to the bottom of the side tracks.
- Make sure the open side of the anchor rail faces up, with the spring and cords exposed.
  - If the open side is covered by a fabric strip, remove it. The fabric strip will be re-installed after making any necessary shade adjustments.

**NOTE:** Remove one end cap before sliding the fabric strip out of the anchor rail.

- **Outside mounts:** Snap the anchor rail into the installation brackets.
  - **Inside mounts:** Attach the anchor rail directly to the sill by using the additional 2 screws provided.
- NOTE:** The screw holes are pre-drilled in the anchor rail.
- Center the rail within the side tracks before mounting.
  
### Anchor Rail Outside Mount

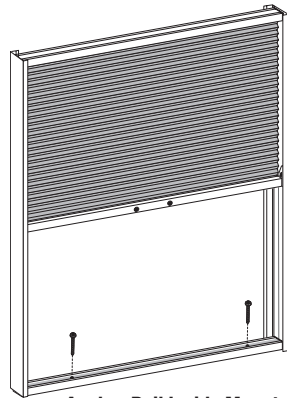


Anchor Rail Inside Mount

## Adjust the Shade

### Tension Cords

The moving rail should slide easily, yet hold in position when it is released. Adjust the tension cords in the anchor rail if the moving rail does not slide properly.

- Move the slip knot to the right to increase the cord tension. Do not stretch the spring to a length greater than 5½".
- Move the slip knot to the left to decrease the cord tension.

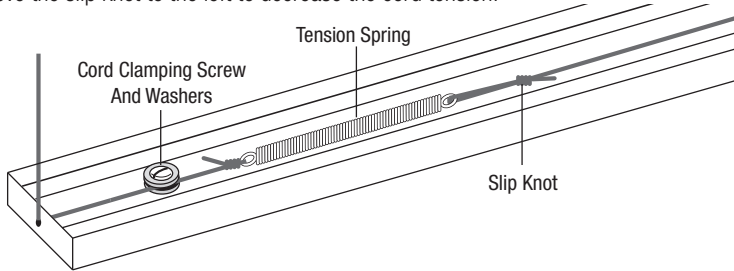

### Moving Rail

The moving rail should be parallel to the anchor so that the two rails make even contact when the shade is closed. Adjust the moving rail if it is not parallel.


- Loosen the cord clamping screw.
- Slide the cord between the two washers.

**CAUTION:** Do not adjust the cord tension while you make this adjustment.

### Support Cord Tension (If Applicable)

If your shade has a support cord, it should be very taut. To adjust:


- Loosen the support cord clamping screw.
- Pull the cord through the two washers to the desired tension.
- Tighten the screw.
- Make sure the cord is held taut between the washers.

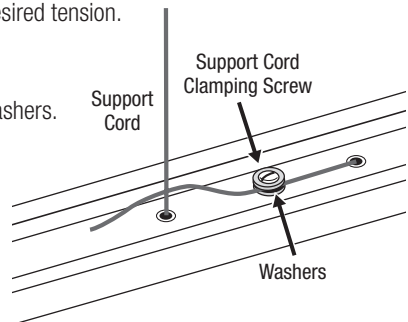

## INSTALLATION/OPERATION


### Install the Fabric Strip

- Center the fabric strip on the anchor rail.
- Angle the fabric strip and insert into the back channel of the anchor rail.
- Gently bow the fabric strip and insert the other edge into the front channel of the anchor rail.

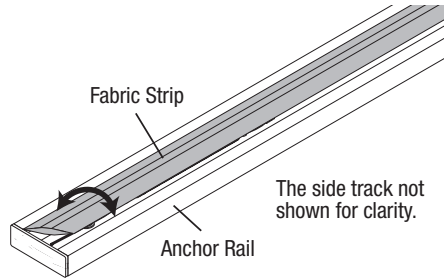

### Attach the Handle

- Arrange the handle with the bar toward the fabric.
- Align the holes on the handle with the holes in the moving rail.
- Use a Phillips screwdriver to attach the handle.

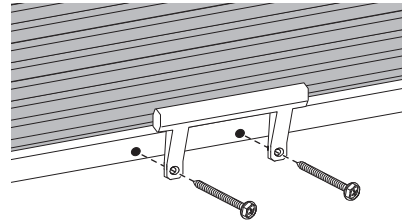

**CAUTION:** To prevent damage to the shade do not overtighten the screws.

### Operate the Shade

#### To Raise the Shade


- Slowly and steadily push up on the moving rail handle. Allow the shade to stack evenly.

#### To Lower the Shade

- Slowly and steadily pull down on the moving rail handle.

#### Extension Pole

- Place the hook on the extension pole around the moving rail handle.
- Slowly and steadily push up or pull down on the moving rail handle to raise or lower.


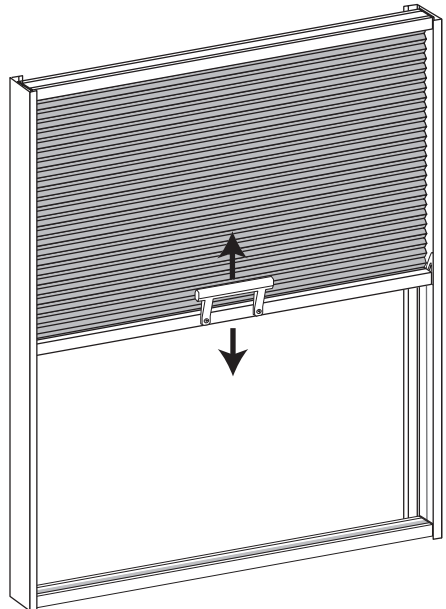


## Troubleshooting

<b>Problem</b>	The shade will not fit into the installation brackets.
<b>Solution</b>	<p>Check that the installation brackets are level and aligned. Shim the installation brackets to level the headrail, if necessary.</p> <p>Be sure the heads of the screws are flush against the installation bracket.</p> <p>Check that the headrail is completely inserted into the installation brackets. See “Install the Shade” on page 7.</p>
<b>Problem</b>	The shade is hard to raise or lower, or will not raise or lower.
<b>Solution</b>	<p>Make sure that the shade fabric is not caught between the installation bracket and the headrail.</p> <p>Check that the headrail and installation brackets are level and aligned in the window. Shim the installation brackets to level the headrail, if necessary.</p>
<b>Problem</b>	The shade raises or lowers unevenly or the bottom rail is uneven when fully raised.
<b>Solution</b>	<p>Check that the headrail and installation brackets are level and aligned. Shim the installation brackets to level the headrail, if necessary.</p> <p>Check to see if there is an obstruction in the shade’s path. If a shade hits an obstruction as it is lowered it may become misaligned. This may cause the shade to be angled or tilted when fully raised. Try lowering the shade completely, then raising it to allow it to self-correct.</p> <p>Adjust the cord tension. See “Adjust the Shade” on page 9.</p>

### Removing the Shade (If Necessary)

 - Fully raise the shade.
- While holding the headrail, loosen the space between bracket and headrail with a flathead screwdriver on each bracket to release the headrail.
- **Outside mounts:** Loosen the space between bracket and headrail with a flathead screwdriver on each bracket to release the anchor rail.
- **inside mounts:** Loosen the screws in the anchor rail.

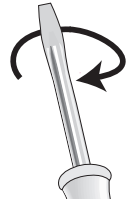

## **Cleaning Instructions**

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning

**DUSTING:** Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

**VACUUMING:** Use a hand-held vacuum with low suction for more thorough dust removal.

**SPOT CLEANING:** Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

**CAUTION:** Avoid creasing Blackout fabrics during cleaning.

**DEEP CLEANING:** Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

**CAUTION:** Do not immerse Blackout fabrics. Do not immerse headrail.

**ULTRASONIC CLEANING:** Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail in the solution.
- Dry the shade completely in the lowered position.

**CAUTION:** Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.

## WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Shades

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.





## HONEYCOMB SHADES

### Skylight with **MOTORIZATION**



 
Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shade.



## TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners




Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 
Wood	No. 6 Hex Head Screws (Provided) 

# GETTING STARTED

 
All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below. ***NOTE:*** *Some parts may vary depending upon your mounting option.*

## PARTS

- Installation Brackets .....



- Battery Wand Clip (headrail) .....

 

- Battery Wand Clip (wall mount) .....



- Screws .....




## BRACKET & BATTERY PACK PLACEMENT

This application **MUST** be installed as an Inside Mount


Make sure that the battery wire will be able to reach the motor.

There is a minimum of 2-3/4" needed from the back of the bracket to the front of the window opening.

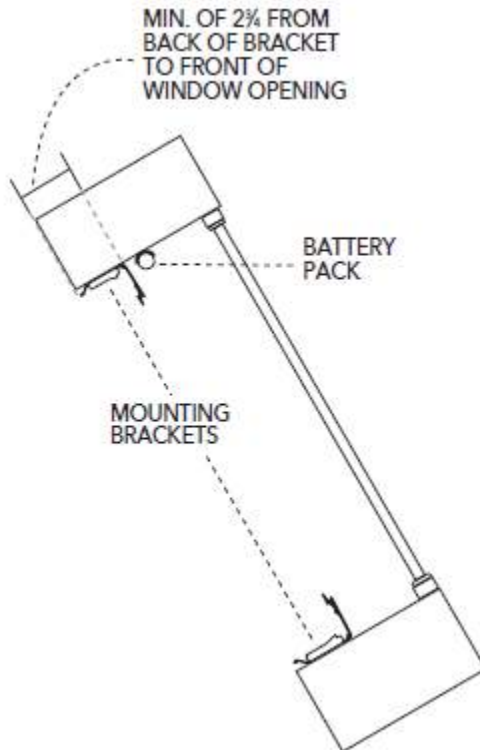


## INSTALLING THE BRACKETS

Shades are shipped with the required number of brackets for proper installation. End brackets should be located approximately 3" from either end.

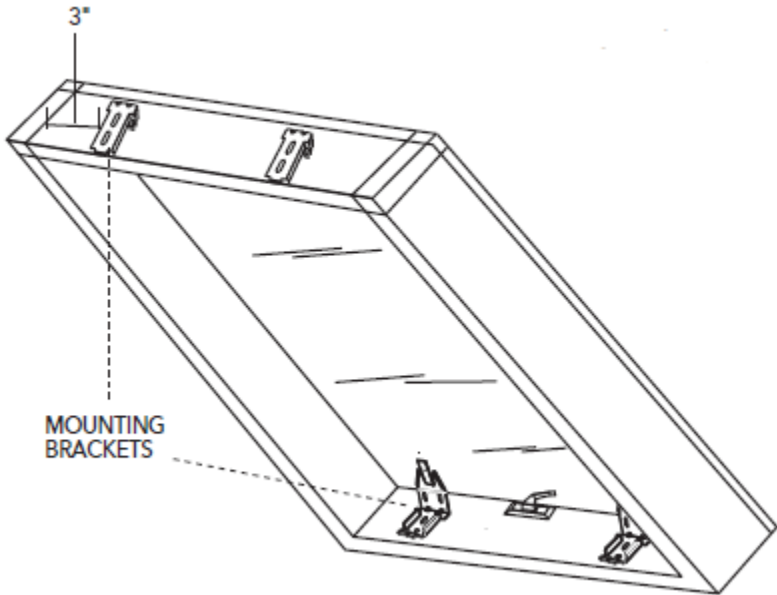

Depending on the width of the shade, additional brackets may be necessary, evenly spaced between the two end brackets.

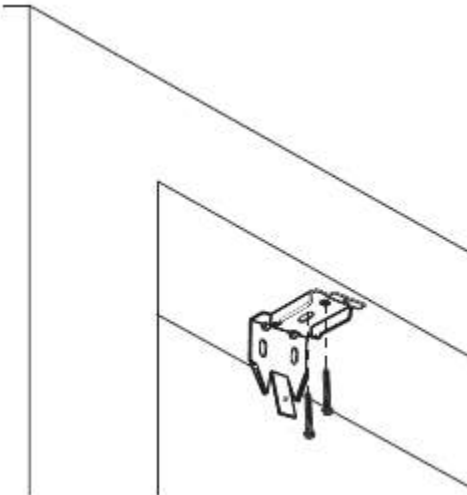


Using the mounting bracket as a template, measure to the edge of the bracket and mark the hole locations with a pencil for drilling. When mounting brackets, make sure they are in line with each other.

## INSTALLING THE BATTERY PACK

Battery Pack - Attach the battery pack clips in the desired location, with the screws provided.


Press the battery pack into the clips.

**Note:** Be sure that the battery wire will reach the motor plug at the position that you are installing it.

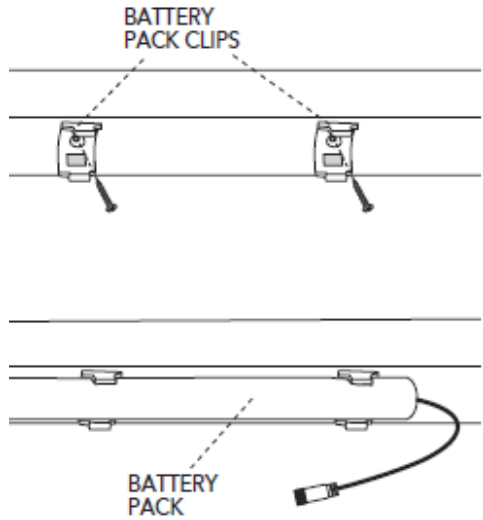

### Attaching the Power Source

Plug the battery wand wire in the motor wire

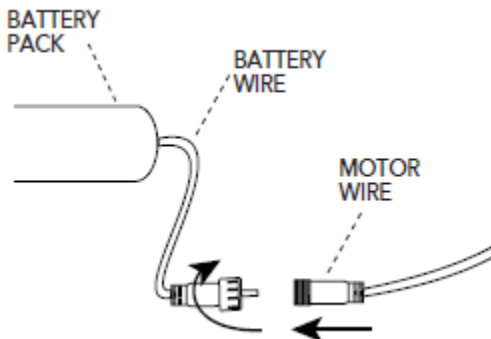

## INSTALLING THE TOP RAIL

Start with the top rail/fabric assembly.



The top rail is the rail with the motor in it.

Before mounting the headrail, make sure that the receiver wire is out of the headrail. For optimal performance position the receiver wire so that it is facing into the room.

Position the motor wire so that it comes out the back side of the shade.

Be sure the motor wire is not pinched by the bracket. Position the rail with the front lip (A) resting on the hooks of all the brackets.



Push the rail firmly up and toward the window until the groove on the rail snaps into place, (B) as shown.

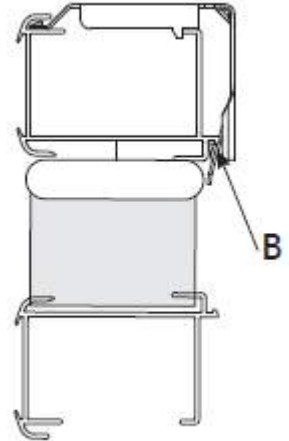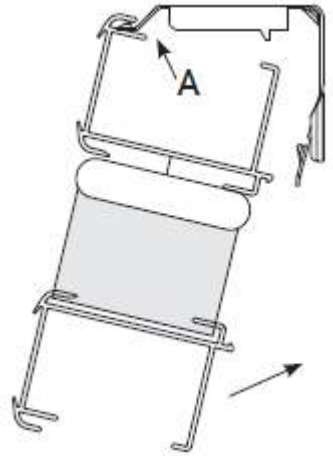

## INSTALLING THE BOTTOM RAIL

Position the rail with the front lip (A) resting on the hooks of all the brackets.

Push the rail firmly down and toward the window until the groove on the rail snaps into place, (B) as shown.

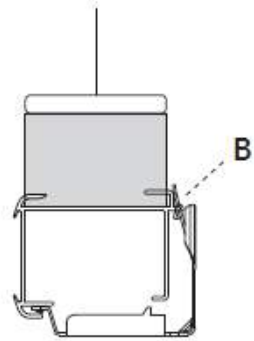
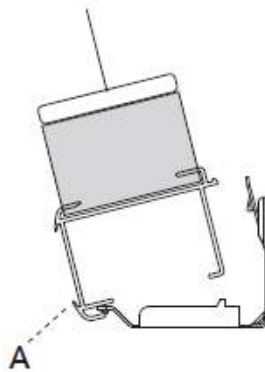


## INSTALLING THE TRACKS

Place the track against the front of the top and bottom rails. Attach the track with the screws provided. Space the screws no more than 12" apart.

Follow the same procedure for the other track. Make sure that the 2 tracks are parallel to each other.


FRONT OF  
TRACK OVERLAPS  
FRONT OF RAILS

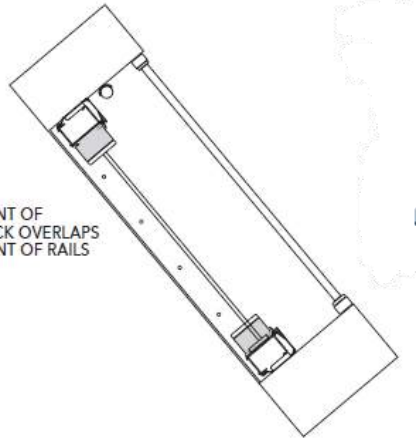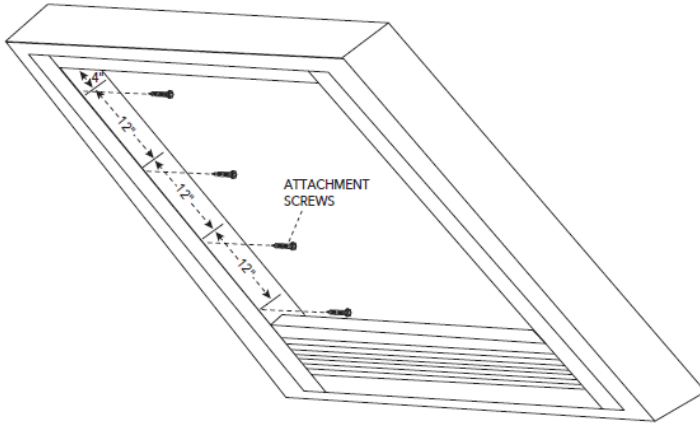



## OPERATING THE SHADE

1. Select the desired channel with the "Channel" key. The channel indicator light will illuminate the channel that is on. If all 5 lights are lit, the remote will control all 5 channels at once.
2. Tapping the "Up" or "Down" keys for less than 2 seconds will move the shade in short steps. Holding the "Up" or "Down" keys down for more than 2 seconds before releasing, will operate the shade in the faster standard speed.
3. Press the "Up" or "Down" keys to raise or lower the shade.
4. Press the "Stop" key to stop the shade anywhere along the travel.


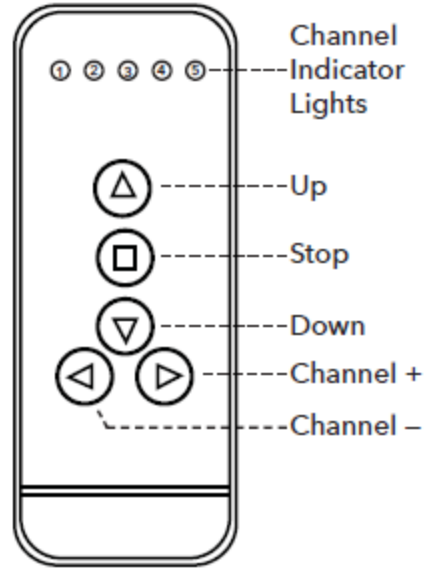


# ADJUST MOTOR LIMITS ON PRIMARY REMOTE (If Desired)

The lower and upper limits have been set at the factory. If you need to make adjustments to the limits, follow the instructions below.

**NOTE:** When clearing the factory set limits, both the upper and lower limits will need to be reset.

Use the **CHANNEL** button to select the channel for the shade that needs to be adjusted. Then follow the directions below. If only adjusting one shade on a channel, unplug the other shades.

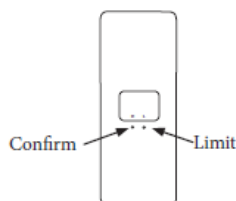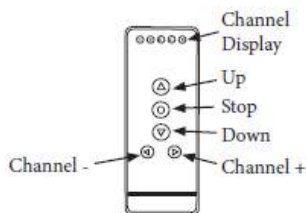

## Setting the Lower Limits

	OPERATION	RESULT
<b>1</b>	Hold <b>LIMIT</b> button down	The motor begins to jog
<b>2</b>	Release the button after jogging starts	The motor is ready for limit setting
<b>3</b>	Press <b>DOWN</b> button	The motor will go down continuously
<b>4</b>	When the motor is close to the desired lower limit, press <b>STOP</b> button on the remote	The motor stops running
<b>5</b>	Press either the <b>UP</b> or <b>DOWN</b> button	The motor runs step by step to adjust lower limit accurately
<b>6</b>	Confirm the setting by pressing the <b>CONFIRM</b> button on the remote	The motor jogs and the lower setting is completed

## Setting the Upper Limits

	<b>OPERATION</b>	<b>RESULT</b>
<b>1</b>	Press <b>UP</b> button on the remote transmitter	The motor will go up continuously
<b>2</b>	When the motor is close to the desired upper limit, press <b>STOP</b> button on the remote	The motor stops running
<b>3</b>	Press either the <b>UP</b> or <b>DOWN</b> button	The motor runs step by step to adjust upper limit accurately
<b>4</b>	Confirm the setting by pressing the <b>CONFIRM</b> button on the remote	The motor jogs and the upper setting is completed

# LEVELING THE SHADE




## Level the Moving Rail

Skylight Shades with Simplicity motorization use a system that allows easy leveling of the moving rail. It is designed to make slight adjustments (Less than 1") to level the moving rails of your shade. It is not designed to make length adjustments.

Use a flat head screwdriver or a dime to turn the adjustment screw to raise or lower that side of the bottom rail. The adjustment screw is on the top of the moving rail.

One quarter turn of the screw will move the moving rail up or down approximately 1/4"

Over-turning the adjustment screw (more than 1" of adjustment) can cause the cord to tangle or wedge inside the rail. The screw should turn easily – Do Not Force.

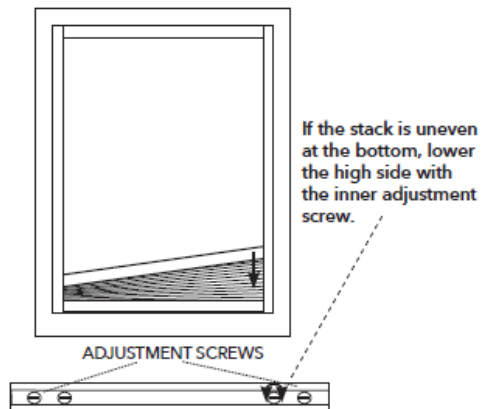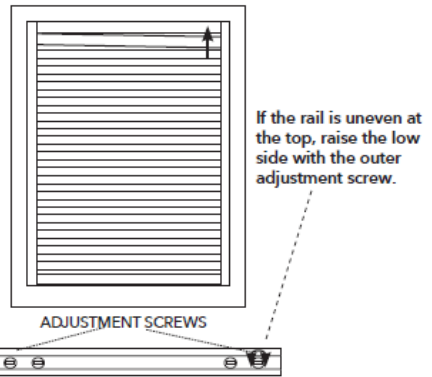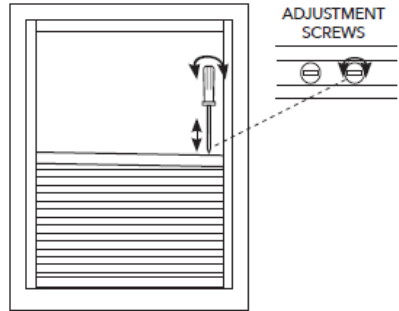

# TROUBLESHOOTING

## THE MOTOR DOES NOT WORK

1. Check that the power source and motor are connected properly.
2. If using a battery wand - confirm that the batteries are fresh and are placed in the wand in the correct orientation.

## THE MOTOR CONTINUES TO RUN IN ONE DIRECTION

The limit setting was unsuccessful and needs to be reset.

## THE MOTOR STOPS WORKING OR WORKS INTERMITTENTLY

If using a battery wand, replace the batteries in the wand with 8 fresh AA alkaline batteries.

## THE INDICATOR LIGHT ON THE REMOTE DOES NOT SHINE OR THE REMOTE-CONTROL RANGE BECOMES SHORTER

Replace the battery in the remote (CR2430 lithium).

 
# REPLACING THE BATTERY IN THE REMOTE

Remove the battery tray from the remote by inserting a fingernail into the indentation on the back of the remote. To avoid the battery falling out of the remote, remove the tray while the remote is face up.

Insert fingernail here



Insert the new battery (CR2430 lithium) into the battery tray so that the writing is facing up when the remote is face up. Slide the tray back into the remote.



## CLEANING INSTRUCTIONS

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

**DUSTING:** Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

**VACUUMING:** Use a hand-held vacuum with low suction for more thorough dust removal.

**SPOT CLEANING:** Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

**CAUTION:** Avoid creasing Blackout fabrics during cleaning.

**DEEP CLEANING:** Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

**CAUTION:** Do not immerse Blackout fabrics. Do not immerse the headrail or any fabric-wrapped rail.

**ULTRASONIC CLEANING:** Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail or any fabric-wrapped rail in the solution.
- Dry the shade completely in the lowered position.

**CAUTION:** Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.

# SAFETY NOTES

## WARNING

Inner or exposed cords can pull out to form a loop, which can STRANGLE a young child.

CHILD SAFETY



- Children can climb furniture to access inner or exposed cords. Move cribs, playpens, and other furniture away from window coverings.
- Always keep cords out of the reach of children.



### CANADIAN RESIDENTS ONLY:



For more safety information  
call 1-866-662-0666 or go to  
[www.healthcanada.gc.ca/blindcords](http://www.healthcanada.gc.ca/blindcords)



## WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Shades

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.

