
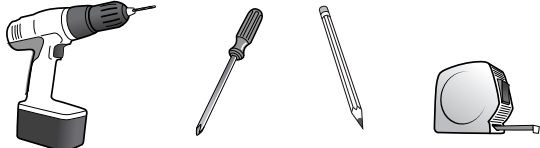
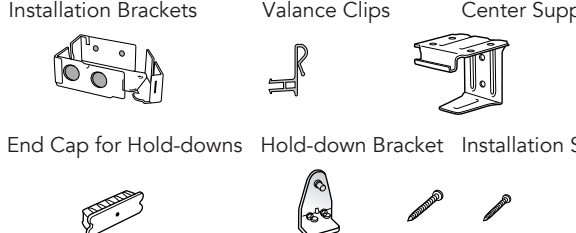



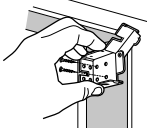
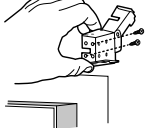
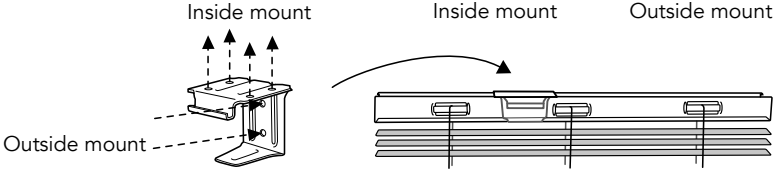
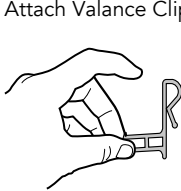
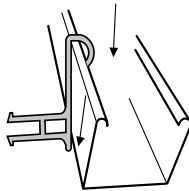
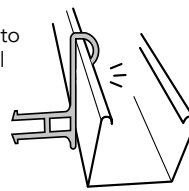

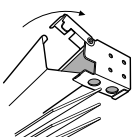



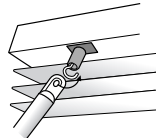
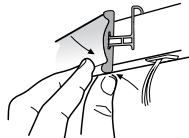




CORDLESS FAUX WOOD INSTALLATION INSTRUCTIONS



<p>1 TOOLS</p>	<p>GETTING STARTED - TOOLS NEEDED FOR INSTALLATION</p> <p>Rechargeable Drill with 1/4" Hex Bit / Phillips Screwdriver / Pencil / Tape Measure</p> 		
<p>2 UNPACKING THE PARTS</p>	<p>Locate the parts and brackets in hardware box. The quantity will vary with blind size.</p> <p>Hold-down parts will only be sent for blinds that have requested this option.</p> <p>Center Support Bracket will only be sent for blinds over 37" wide.</p> 		
<p>3 BRACKET PLACEMENT</p>	<p>Left Bracket  Right Bracket </p> <p>IF APPLICABLE: Center Support Bracket </p> <p>Inside mount  OR  Outside mount</p> 		
<p>4 VALANCE CLIPS & WAND</p>	<p>Attach Valance Clips   Clip on to Headrail </p> <p>Assemble the Wand </p> <p>Snap together where applicable.</p>		
<p>5 FINISHING UP</p>	<p>Slide into Brackets   </p> <p>IF APPLICABLE: Hold-down brackets </p> <p>Attach Wand </p> <p>Install Valance </p> <p>OR   OR </p>		
<p>6 OPERATING INSTURCTIONS</p>	<p>Raise or lower the blind by lifting or lowering the bottom rail to the desired height.</p> <p>PLEASE NOTE: This product is made up to +6" of ordered height. Blinds over 84" may include up to 10" of additional height. This is normal for this product and not considered a manufacturing error or defect.</p> <p>Open or close the blind slats by turning the wand until the slats are opened or closed to the desired amount.</p>		