

ELITE S - Series™ Cassette: S-300 / S-325 / S-350

ELITE
WINDOW FASHIONS™

INSTALLATION INSTRUCTIONS

1. Install the brackets on the mounting surface, ensuring brackets are level and installed between **2"-4" from each end of the cassette** (fig 1). **A third bracket is required only for shades wider than 72"**. Elite will provide the exact number of brackets required for your order based on shade quantity and shade width.
2. Hook the cassette under the front of the mounting brackets and snap rear of cassette in place (fig. 2).

Removal:

Insert a flat screwdriver at the back of the cassette between the spring clip and cassette (fig. 3). Press back on the cassette to release.

Installation

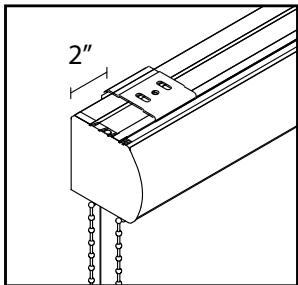


fig. 1

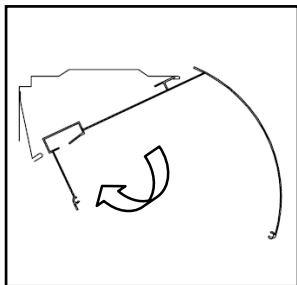


fig. 2

Removal

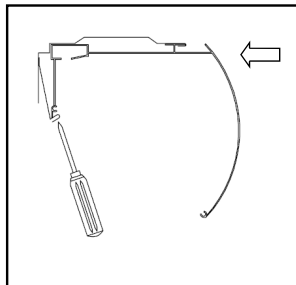


fig. 3