

Comprehensive Roller Shade Installation Guide

Cordless Roller Shades


ATTENTION!!! READ CAREFULLY!

This shade has a reliable long-lasting Spring Motor. The Spring Motor must have proper tension in order to function as intended. Handling in transit can effect spring tension. Therefore, please give special attention to Step 4 of these instructions to optimize the performance of your shade.

Step 1. Check Package Contents. Missing part? Call 888-257-1840

Mounting hardware kit includes the following:

Part	Quantity
a Shade	1
b Slat for Hem Pocket	1
c Brackets	2
d Mounting Screws	4
e Plastic Anchors	4 (For Drywall or Plaster Mounting)

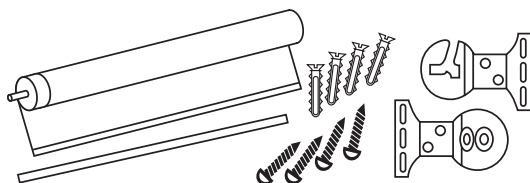


Step 2. Tools required

Screwdriver, tape measure, pencil, drill*, step ladder.

* Use 3/32" drill bit to predrill screw holes

• Use 1/4" drill bit for wall anchors

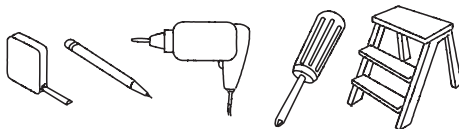


Step 3. Bracket Location and Installation

Your window shade can be installed either inside the window frame or outside the window frame or on the ceiling. When measuring and installing shades, make sure there is a "play" between the roller and the brackets. Shades mounted too tight in the brackets will not function properly. Attach brackets to inside or outside of casing or to the ceiling. The slotted bracket goes on the left side, the bracket with holes on the right.

For Outside Mounting / Ceiling Mount:

Hold shade to desired position, making sure it is level, and place pencil marks at base of pin at each end of the roller. Secure brackets. For outside mount, insert the round pin end into the inner hole of the right bracket. For ceiling mount, insert the pin into the outer hole. Then insert the other end of the shade into the slot of the left bracket.

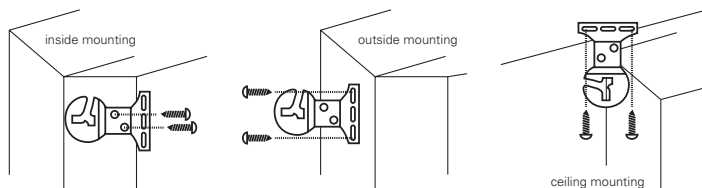


For Inside Mounting:

Allow 1/4" clearance between top of frame and fully rolled-up shade. This will provide enough clearance to lift shade into slotted bracket. Spring loaded tip provides up to 3/8" extra width if needed. Always insert the pin end into the right side bracket first. If the brackets are installed as illustrated (facing out), place the pin into the inner hole of the right bracket. If the brackets are installed facing down (like Ceiling Mount), place the pin into the outer hole of the right bracket. Push into bracket to compress the spring, then place the metal tab on the left side of the shade into the slot of the left bracket. For standard shades, the slotted bracket goes on the left side, the bracket with holes on the right. For reverse-roll shades (inside mount only!), the slotted bracket goes on the right, and the open part of the bracket must face the window – the bracket can be mounted to the top or side of the window frame.

Reverse Roll Mounting:

For reverse-roll shades (inside mount only!), the slotted bracket goes on the right, and the open part of the bracket must face the window – the bracket should be mounted to the top of the window frame [see illustration].

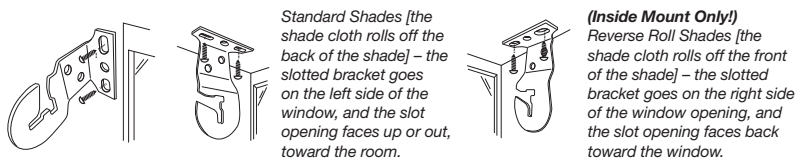

Step 4. Adjust Spring Tension

Spring Tension should be adjusted to assure best performance and to suit personal preference.

The tension on the spring should be neither too loose nor too tight. When a window shade refuses to roll up, the spring is too loose. When it won't stay down the roller spring is too tight.

To Increase Tension: lower the shade about 18 inches from the top, and then remove it from the brackets. Roll-Up the shade all the way to the top by hand, and then place the shade back into the brackets as described in Step 3. Repeat as often as necessary to achieve desired tension.


Caution: over-winding may result in permanent damage to the spring motor.

To Decrease Tension: remove the shade from the brackets, and then unroll about 18 inches of shade material, and then place the shade back into the brackets as described in Step 3. Repeat as often as necessary to achieve desired tension.

Step 5. How to Operate

If this shade does not roll straight, correct as follows:

Make sure brackets are mounted level, or the shade will not roll straight. If shade veers toward the right, correct by lowering shade completely and placing a piece of tape (multiple pieces may be necessary) as close to the left edge of the roller as possible. It will act as a shim.

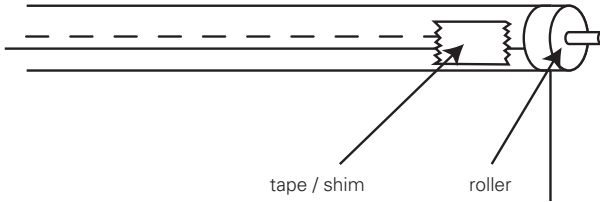

If shade veers toward the left, correct by lowering shade completely and placing a piece of tape (multiple pieces may be necessary) as close to the right edge of the roller as possible. It will act as a shim.



Cleaning your Blinds

Cleans easily with a damp sponge or soft cloth. Allow the shade to hang it's full length for a minimum of 72 hours to minimize wrinkles and creases.


Cassette Valance System

Step 1. Mount The Brackets

Mount the brackets to the wall or window frame, with the outside brackets no further than 2 inches (50mm) from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals.

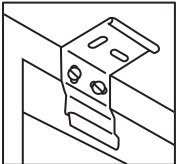
**Cassette 80**

For **wall or outside mounts**, use the rear bracket holes. Make sure the release tab is always mounted on the bottom.

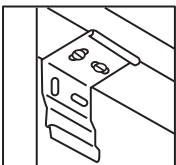


For **inside ceiling mounts**, use the top bracket holes. Make sure the release tab is always mounted on the bottom.


Mount the headrail. Position the headrail with the front panel (A) resting on the top lip of the brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place, (B) as shown.

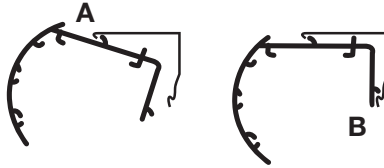

Cassette 120

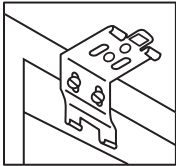


For **wall or outside mounts**, use the rear bracket holes. Make sure the release tab is always mounted on the top.

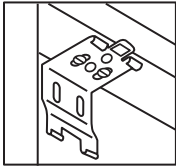

For **inside ceiling mounts**, use the top bracket holes. Make sure the release tab is always mounted on the top.

Mount the headrail. Position the headrail with the back panel (A) resting on both bottom hooks of all brackets. Push the front of the headrail firmly upwards and toward the window until the groove at the top of the headrail snaps into place, (B) as shown.

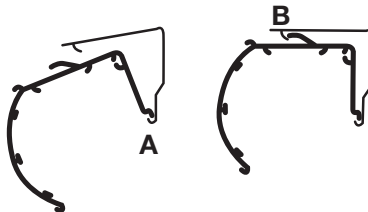

Step 2. Removing the Shade

Cassette 80: From the bottom rear of the headrail, insert a flathead screwdriver in between the head rail and release the tab. Gently twist the screwdriver and pry open the bracket to release the head rail. As you release the brackets, support the headrail to keep it from falling.

Cassette 120: from the top of the head rail insert a flathead screwdriver in between the headrail and release the tab. Gently twist the screwdriver and pry open the bracket to release the head rail. As you release the brackets, support the headrail to keep it from falling.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call: 1-800-264-1190

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials or workmanship that causes the product to no longer function).

5 Years: All fabric

Not Covered: Normal Wear and Tear. Any product that fails due to:

- abuse • exposure to salt air • improper installation • accident • extraordinary use • improper operation • alteration • improper cleaning • misapplication • damage from pests/insects/pets
- improper handling • misuse

Costs associated with:

- product removal • transportation to and from the retailer • brand label removal • product re-measure • incidental or consequential damages • product reinstallation • shipping

To Report Shipping Damage

If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.

To Obtain Service

If you suspect that this Phase II product has a manufacturing defect in materials or workmanship:

1. Locate the sales receipt
2. Call place of purchase

Any unauthorized returns will not be accepted.

Warranty Remedy

THIS SHALL BE YOUR SOUL REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will, at our discretion, do one of the following:

- repair the product
- replace the product
- refund the cost of the product

Color

Colors vary from lot to lot and may not exactly match sample swatches or previous purchases.

Discontinued items or color selections will be replaced with the closest equivalent current product.

YOUR RIGHTS UNDER STATE LAW

This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you.

No agent, representative, dealer or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

WARNING

STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible.

Smart WiFi Hub Instructions

1. Download & Install "P2 POWERMATE" APP on your cellphone



powermate smart hub




powermate

powermate APP


- (1) Search for "P2 POWERMATE" on the App Store or Google play
- (2) Download "P2 POWERMATE" and install the APP on your phone

2. Register and login to the P2 POWERMATE APP

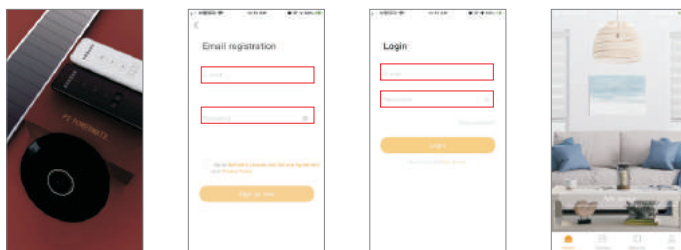


- (1) When installation is complete open P2 POWERMATE
- (2) Create an account using your e-mail address – enter a password that should include letters and numbers only, no signs or special characters
- (3) Login in to your account (after the account is established you will login to the APP directly)

3. Link the P2 POWERMATE hub to the POWERMATE APP

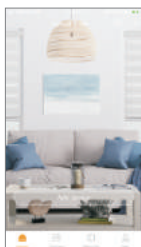

- (1) Choose "Add device" on desktop

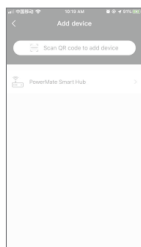

- (2) Choose P2 POWERMATE Smart Hub



- (3) Choose "Allone Pro"



- (4) Power on the P2 POWERMATE hub




- (5) Press and hold the central button on the hub until the circular light turns RED and Flashes



- (6) Choose "Next" on the P2 POWERMATE APP





- (7) Choose "Join" to enable the hub to access your Wi-Fi network
Tip: Make sure your network is available, not restricted to assure access

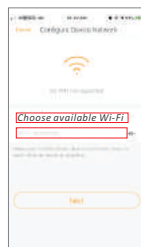

- (8) Select your Wi-Fi network and input your Wi-Fi password




- (9) The P2 POWERMATE hub will connect to your Wi-Fi network automatically. When you see "Added successfully" on the P2 POWERMATE APP, choose "Done"

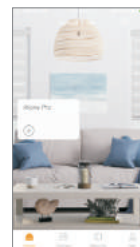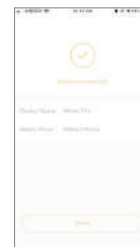

- (10) The APP is linked to the P2 POWERMATE hub when Allone Pro appears on the desktop


4. Add your shades to the P2 POWERMATE APP

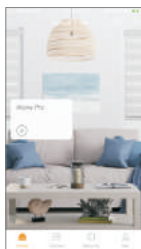


- (1) Choose "Allone Pro" on the APP desktop



- (2) Choose "+ Add" at the menu bottom right corner

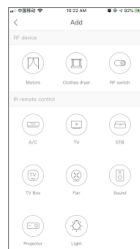


- (3) Choose "Motor" device

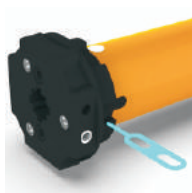

- (4) Now press the "programming button" on motor head for 1 second - the shade will oscillate one time. Then tap "pairing" on P2 POWERMATE APP. If the shade is successfully added to the APP, the shade will oscillate one more time.
If not, repeat the step 4 operation.




- (5) Choose "Response has been stored" when the shade is successfully added to APP.

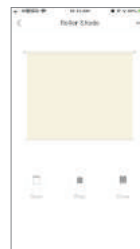

- (6) The shade has been added to the P2 POWERMATE APP. Confirm that you can now control the shade using the APP, and then proceed to add additional shades if applicable.

5. Family “Member Permission” management

Note that the set-up account is the one and only administrator – only the administrator's login can make changes to the APP. However, the administration account can add family members with their own ID, and they can then control the shades from their phones or tablets.

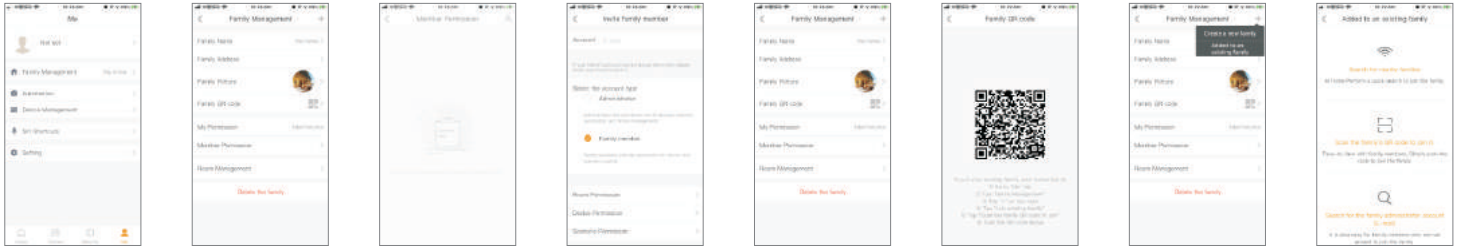

(1) Choose “Me” on the P2 POWERMATE desktop, and then select “family Management” menu


(2) Choose “Member Permission”

(3) Tap “+” family members at the top right corner of the screen

(4) Input your family “Account e-mail address” then go to invitation to your family member

(5) When your family member receives and accepts the invitation, the Administration account shows the family QR Code that the family member will scan. The family member taps “+” at the top right corner, and chooses “Add to an existing family”. Choose “scan the family’s QR code to join it”, and then scan the code on the administrators screen.

6. “Siri Shortcut” Voice Command Management

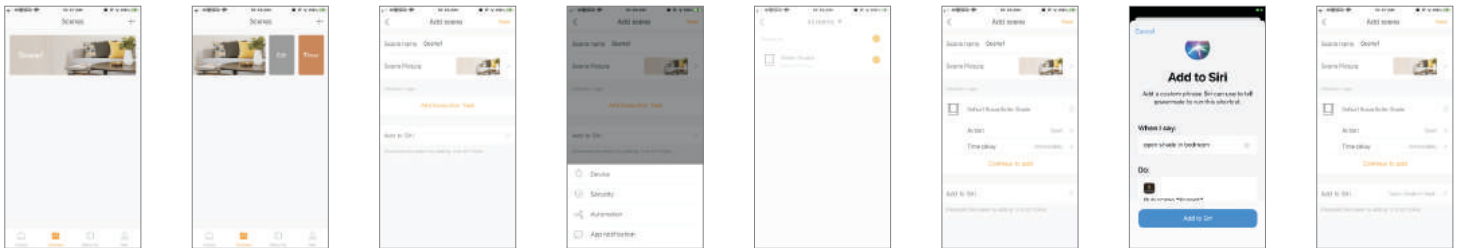

(1) Choose “Scenes” on the P2 POWERMATE desktop. Create a scene.

(2) Slide the “scene” icon to left, and then choose “Edit” scene


(3) Add Execution Task

(4) Choose “Device” and then select the shade you want to add to this scene

(5) Choose an “Action” for the shade you selected. Then Add to Siri.

(6) In the Add to Siri menu, you can edit the “Siri shortcut command”. For example: “open shade in bedroom”. After all tasks are set up, save the scene. Now you can let Siri control your shades.

7. Link to “Amazon Alexa” & “Google home” voice control device

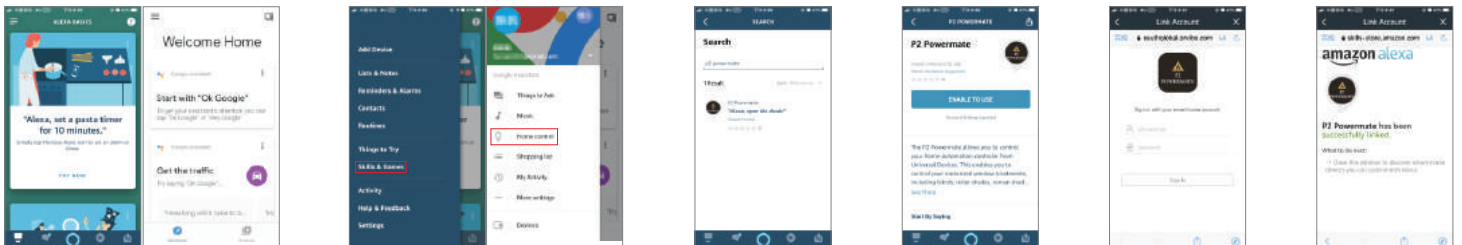

(1) Login in your “Amazon Alexa” or “Google home” APP

(2) “Amazon Alexa” add “Skills & Games” “Google Home” add “Home control”

(3) Search “p2 powermate”

(4) Choose “ENABLE TO USE”

(5) Input your “p2 powermate” account and password, then sign in. Now P2 Powermate had been linked to your “Alexa” or “Google Home” voice control device.

Motorization Troubleshooting Guide

PROBLEM	SOLUTION
Shade moving in the wrong direction.	Reset the motor to factory spec and erase all limits, then program from the beginning.
Shade not stopping at desired height (reset limit).	Top limit can not be reset without erasing all limits and starting from the beginning. Take the shade to the incorrect limit, press and hold the program button on the back of the remote until the shade jogs. Move the shade to the desired height, then press and hold the program button until the shade jogs again. The limit has been reset
Motor has no response to remote.	Press and hold the program button on head of motor. See if it jogs. If it does, then walk through programming from beginning, Check the antenna, make sure it is not kinked or touching metal.
Still not working. Plug in the motor.	See if motor operates or can be programmed.
Switch motor to another channel.	If remote already has 1 motor on the desired channel, put that motor in sleep mode and then erase the memory of the motor that is to be switched and joined on another channel. Program the new channel and then wake the other motor up.
Motor begins to beep. Power is getting low.	Plug in the motor as soon as possible. If the power drops to zero voltage, the memory could be lost and the motor will have to be reprogrammed.